

## **GUARANTEE**

This scale comes complete with a full 12 months guarantee from date of purchase for faulty workmanship or material. If it is necessary to return the scale for attention, please retain the original packing. In case of difficulty, return the scale packed within to your dealer or:

**ELANE ELECTRONICS LTD.**

**ELANE** MINI - PACK

# **OPERATING MANUAL**

## **Technical Details**

- ◇ Operates on a 9V-12V mains adapter (Included)
- ◇ Load cell Technology
- ◇ Liquid crystal display
- ◇ Capacity 100.0g
- ◇ Graduation 0.1g
- ◇ Auto switch-off after 90 seconds of non-use

## **MINI-PACK SCALE**

PLUG IN SUPPLY AND PRESS THE KEY,

ON/ZERO

A MESSAGE WILL APPEAR ON THE DISPLAY FOR A FEW SECONDS AND

Auto-  
test

THEN IT AUTOMATICALLY DISPLAYS ZERO GRAM ON THE LCD

Weight  
0.0g

PUT AN ITEM ON THE PLATFORM AND THE WEIGHT WILL SHOW

Weight  
20.0g

PRESS ON/ZERO KEY, WILL SET DISPLAY TO ZERO GRAM WILL SHOW

Weight  
0.0g

PRESS TARE KEY FIRST TIME SET DISPLAY TO SET POINT PRESS TARE KEY SECOND TIME WILL CANCEL TARE FUNCTIONS

Tare  
0.0g

PRESS OFF KEY TO TURN OFF THE SCALE

## **PACK FUNCTION**

AT ZERO WEIGHT  
PRESS SET KEY TO SET A PACK WEIGHT

Set  
0.0g

PRESS ZERO FOR 0000g DISPLAY  
USE < AND > KEY TO CHANGE THE NUMBERS  
PRESS AND HOLD WILL CHANGE THE DISPLAY TO MEDIUM THEN FAST SETTING

PRESS SET TO CONFIRM SET VALUE  
THE RANGE OF SETTING IS - 1000 TO +1000gram

ADD ON WEIGHT AND THE DISPLAY WILL OFFSET THE SETTING

S= 12.5g

A LED WILL LIGHT UP AND BUZZER SOUND WHEN ADD ON WEIGHT IS WITHIN 5% OF THE SET WEIGHT

LED WILL BLINK AND BUZZER WITH LONGER SOUND WHEN ADD ON WEIGHT SAME AS SET WEIGHT.

## **BE SURE THAT THE SCALE IS OPERATED ON A FLAT SURFACE**

In order to operate correctly, the scale must be installed on a firm, flat surface condition.